m walnutstudiolo.com △ 503.447.6889

"The Sellwood" Leather and Wood Handle (Small/Large) **Installation Instructions**

- Gather your tools: drill, screwdriver, ruler, pencil.
- Decide where you want the handle to go and mark your drill holes with a pencil. The holes will be 3½" longer than the length of the wood:
 - o For the Sellwood Large, mark the holes 15.5" apart from center to center.
 - For the Sellwood Small, mark the holes 9.5" apart from center to center.
- I recommend you drill a pilot hole at the pencil marks using a 1/8" drill bit first. Using the pilot hole as the center, next drill a hole using 7/32" bit.
- Thread the Chicago screw (surfaceless head) and (optional) washer through the leather and into the holes you drilled in the door/drawer.
- The hardware provided includes 2-4 back screws of different lengths for doors and drawers of differing widths. Choose the back screw that fts your project the best.
- Secure the pull by inserting and tightening the chosen back screw into the Chicago screw on the backside of the door/drawer. Nicely done!

We'd love to see pictures of your installations! Share them with us at walnutstudiolo@gmail.com, or find us on social media as @walnutstudiolo.

What to do with that extra hardware?

We include duplicate hardware with your handle for max flexibility. Instead of throwing away, you could: a) keep it for future use, in case you want to move the handles, b) recycle it with mixed metals, or c) mail it back to us for re-use: Walnut Studiolo – Reuse Program, 36005 Hwy 53, Nehalem OR 97131.

















Walnut combines thoughtful modern design with old-world craft.

m walnutstudiolo.com Δ 503.447.6889

"The Sellwood" Leather and Wood Handle (Small/Large) **Installation Instructions**

- Gather your tools: drill, screwdriver, ruler, pencil.
- Decide where you want the handle to go and mark your drill holes with a pencil. The holes will be 3½" longer than the length of the wood:
 - o For the Sellwood Large, mark the holes 15.5" apart from center to center.
 - For the Sellwood Small, mark the holes 9.5" apart from center to center.
- I recommend you drill a pilot hole at the pencil marks using a 1/8" drill bit first. Using the pilot hole as the center, next drill a hole using 7/32" bit.
- Thread the Chicago screw (surfaceless head) and (optional) washer through the leather and into the holes you drilled in the door/drawer.
- The hardware provided includes 2-4 back screws of different lengths for doors and drawers of differing widths. Choose the back screw that fts your project the best.
- Secure the pull by inserting and tightening the chosen back screw into the Chicago screw on the backside of the door/drawer. Nicely done!

We'd love to see pictures of your installations! Share them with us at walnutstudiolo@qmail.com, or find us on social media as @walnutstudiolo.

What to do with that extra hardware?

We include duplicate hardware with your handle for max flexibility. Instead of throwing away, you could: a) keep it for future use, in case you want to move the handles, b) recycle it with mixed metals, or c) mail it back to us for re-use: Walnut Studiolo – Reuse Program, 36005 Hwv 53, Nehalem OR 97131.






















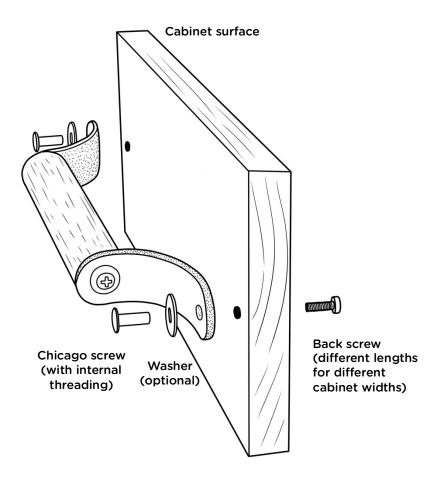

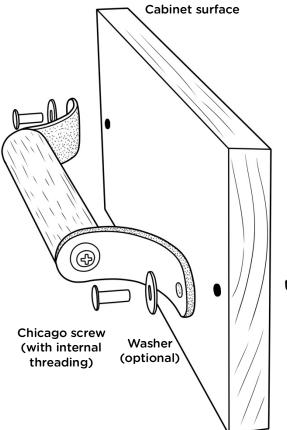

Back screw (different lengths for different cabinet widths)